


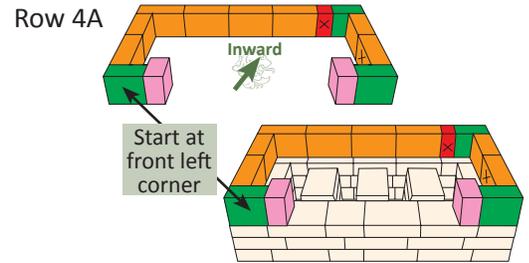


Row 4A, B, C

1. Retrieve the Color Block **WALL STONE** for **Row 4A**.
2. Using the area around the base, stage the blocks as shown (*stamps facing inward*).
3. Beginning at the front left corner, apply a 3/16" bead of adhesive around the top of the previous Wall Stone row (*or in 15 minute stages*). **Do not apply adhesive to stones marked with an X. They will be used as an access panel for Gas installation.**
4. Place the first block on the top front left corner. Apply a 3/16" bead of adhesive on the side of that block and fasten the next block to it.
5. Repeat (*except for the Stones marked with an "X"*) until Row 4A is complete.




*(**It is recommended that you use a gas fitter to install the gas supply).*

1. Retrieve the Color Block **WALL STONE** for **Row 4B**.
2. Using the area around the base, stage the blocks as shown (*stamps facing inward*).
3. Beginning at the front left corner, apply a 3/16" bead of adhesive around the top of the previous Wall Stone row (*or in 15 minute stages*).
4. Place the first block on the top front left corner. Apply a 3/16" bead of adhesive on the side of that block and fasten the next block to it.
5. Repeat until Row 4B is complete.

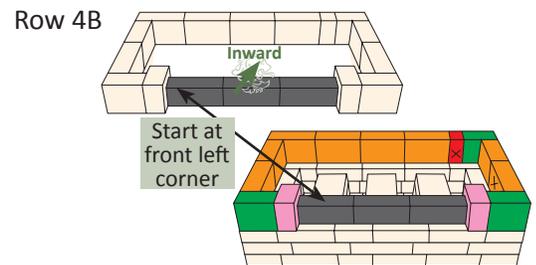


1. Retrieve the Color Block **COPING STONE** for **Row 4C**.
2. Stage the blocks as shown (*stamps facing inward*). *(**Ensure the coping stones are square and level using a tape measure and shims as needed).*
3. Once you are satisfied with their placement, remove the block from the front left corner and apply a 3/16" bead of adhesive to the bottom and the side of the block. Fasten in place.
4. Repeat until Row 4C is complete.

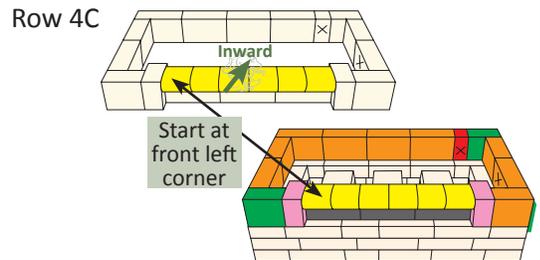

*(**Check your level and straightness before continuing).*

1. Retrieve three **STONE SPACERS**. Using a hand grinder, modify the Spacers to fit between the rear wall and the Fireplace Insert to ensure a snug fit. Apply a small amount of adhesive to secure the Spacers.

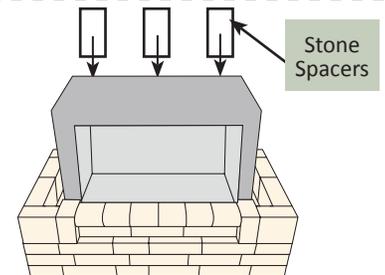

Row 5

1. Retrieve the Color Block **WALL STONE** for **Row 5**.
2. Using the area around the base, stage the blocks as shown (*stamps facing inward*).
3. Beginning at the front left corner, apply a 3/16" bead of adhesive around the top of the previous Coping Stone row (*or in 15 minute stages*).
4. Place the first block on the top front left corner. Apply a 3/16" bead of adhesive on the side of that block and fasten the next block to it.
5. Repeat until Row 5 is complete.

